

ROOF WINDOW

Fenêtre de toit • Dachfenster • Ovenlysvindue • Dakvenster • Finestra per tetti • Tetőtéri ablak • Střešní okno
Okno dachowe • Ferestre de mansarda • Strešno okno • Strešné okno • Krovni prozor



See the installation video and picture at Liteleader Youtube channel.

01

x1

x1

x4: C2A, C4A, F6A, M4A, M6A
x5: S6A
x6: M8A

x18: C2A, C4A, F6A, M4A, M6A
x27: M8A, S6A

02

10cm

03a

20-30mm

20-30mm

a

b

b + 45mm

a + 40-60 mm

80mm

80mm

b + 45mm

TFX

16-120 mm

16-50 mm

03b

0-20 mm

0-20 mm

a

b

b + 45mm

a + 40-60 mm

0-16 mm

SFX

04

M8A
b=1400mm

S6A a=1140mm

05

06

07

1

2

3

4

300 mm

1

2

3


4

*

08


* Roofing underlay not included • Krovna folija nije u kutiji • Střešní folie není součástí dodávky • Waterkerende manchet / dampfolie wordt niet meegeleverd • Film sous-toiture non inclus • Dachfolie ist nicht in der Verpackung enthalten
A dobow nem tartalmazza a tetőfóliát • Foglio impermeabile non incluso • Folia wstępnego krycia nie jest załączona • Membrana de acoperis nu este inclusa • Strešná fólia nie je súčasťou balenia • Lámina impermeable no incluida

www.liteleader.co.uk




TFX, UFX


09a

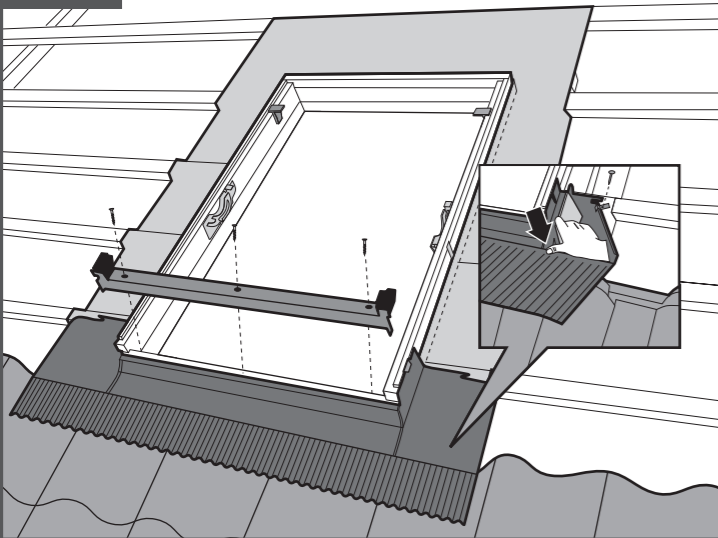


10a

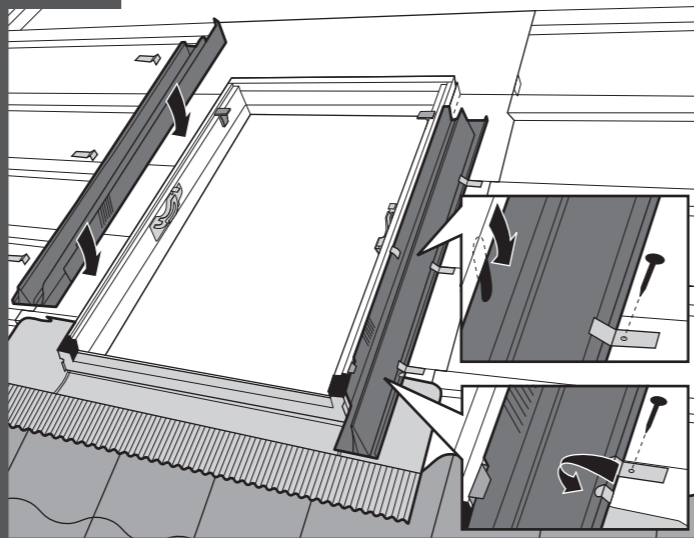


11a

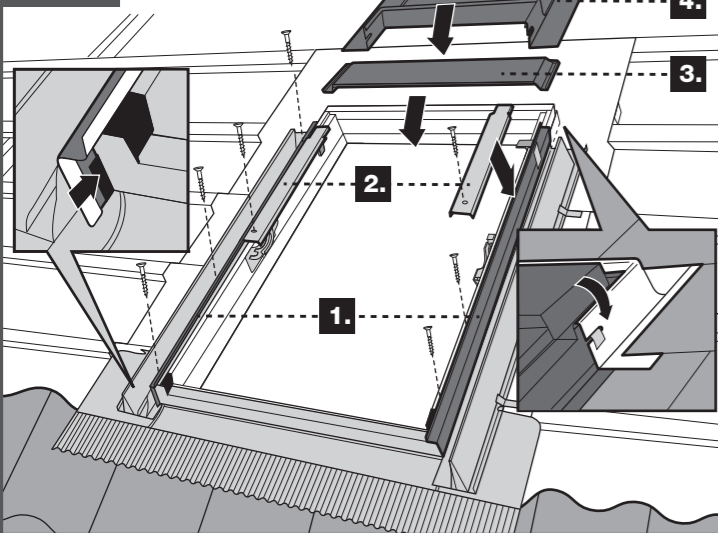


12a

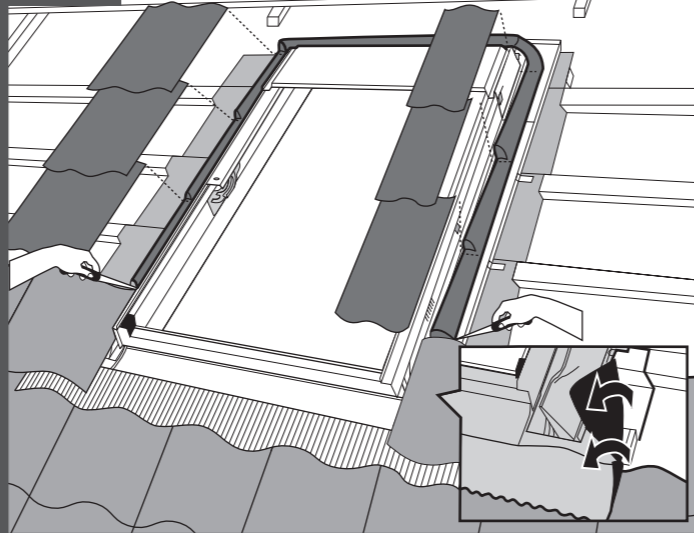

13a

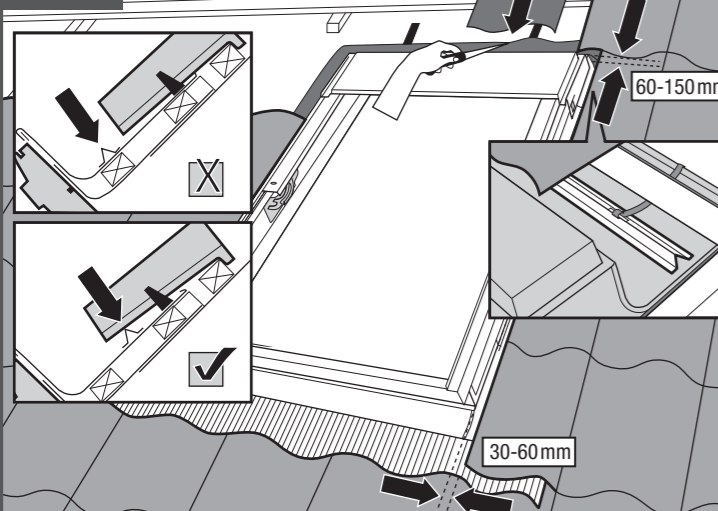


14a

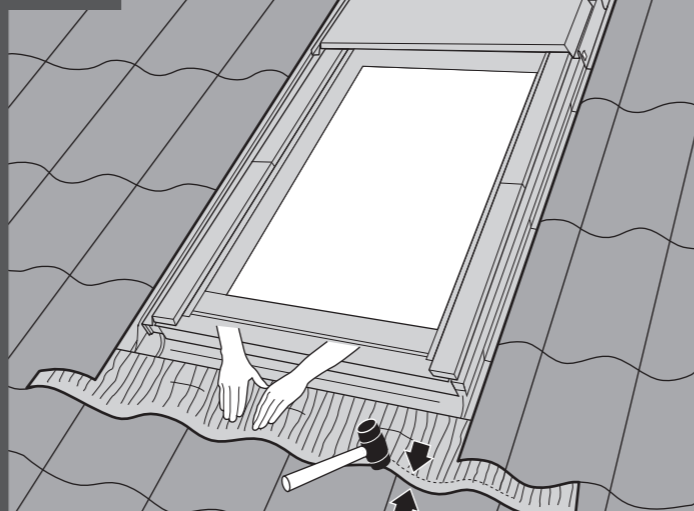


SFX


09b

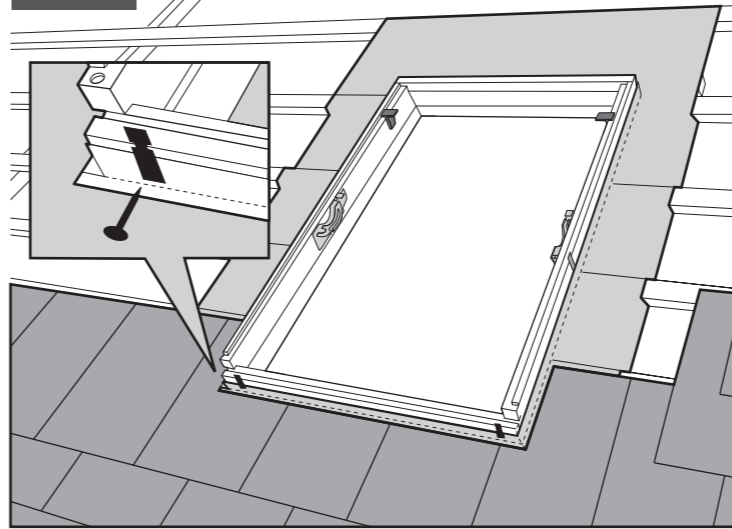


10b

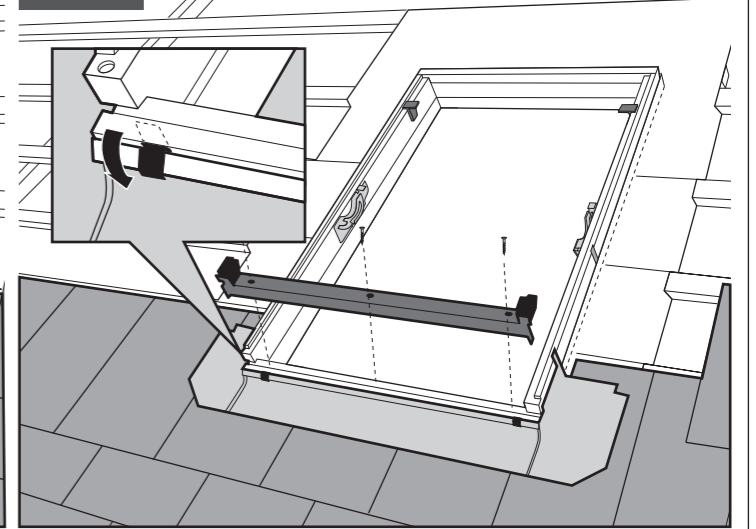


11b

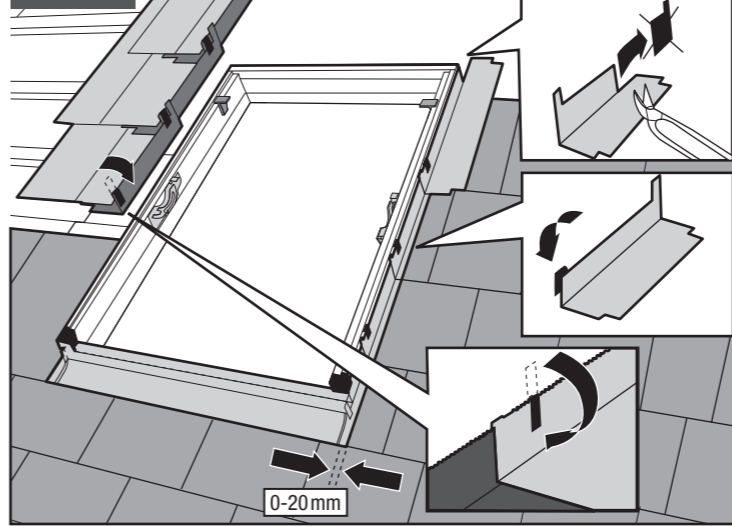

12b

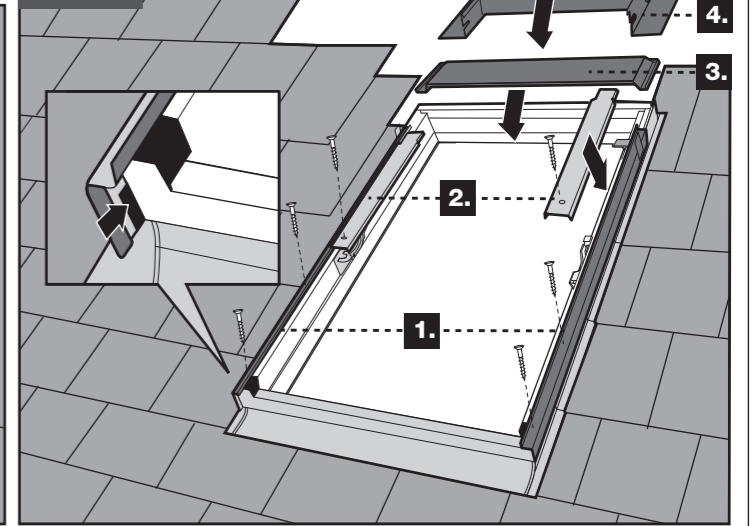

13b

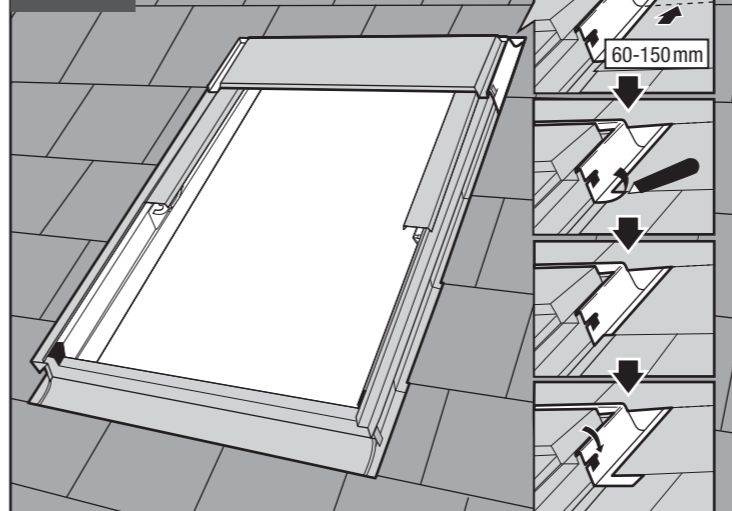

14b

